

How to move pages from surface 0 to surface 1?

- 1. Click Surface List on CombinePage View
- 2. Select Surface0, unselect Enable Auto Ganging, right click on the page need to move, select Delete Selected Job, as following:



Click Surface1, then click Page List, you will see a file name is changed into Blue, that is the page you deleted just 3. now, as following:



Now, drag this page and put to right side, and move it to the correct location. Then output. 4.

No.9, 5th Street, Shangdi Information Industry Base Haidian District, Beijing 100085, China

1 / 2

Tel: +86 10 8253 1476 Email: zhou.bg@founder.com



CombinePage Vew												
-			•	5	6	2	Ð	В,	2	😑 Enable Aut	o Ganging	🗹 Ena
Page Lit	M Sufa	ce List	Cinch		îî.		. î	1		9 10		12
Ē	1	1	inch -									
CPLPLSR	H0664.pd	E1_K	1-	- `P	÷.							
158.4*	140.5 mm	Surface0	2-	- /	1							
158.4	140.5 mm	_1_C Surface1		ς,	1							
CPLPLSR	tH0664.pd	CIUM	3)	,		1					
158.41	140.5 mm	Surface0	4	- 5	÷		i					il
CPLPLSR	H0664.pd	ωx		ļ	,							
158.41 CPL PL SR	140.5 mm, HD664 wt	Surface0	°-		ĩ							·
158.4	140.5 mm	Surface1	0					7				-
CPLPLSR	tH0664.pd	f_1_C-10		-	-					技		
158.4	140.5 mm	Surface1	1	E	2.							
158.4"	140.5 mm	Surface1	•	. .	_		1			न्		
				E	2					r .		
				Z	-		4			.đ.		1
			10	- F	2					50. 10		
			11-									1
			-									

end

No.9, 5th Street, Shangdi Information Industry Base Haidian District, Beijing 100085, China

Tel: +86 10 8253 1476 Email: zhou.bg@founder.com

Beijing Founder Electronics CO., Ltd. Founder Information Industry is a leader in information technology, providing comprehensive solutions, including IT services, software, hardware, and data operation. http://www.foundereagle.com/

