How to use

Server

After finished the installation of ElecRoc V6065, restart server computer, and then run **server .exe** on server computer.


PC Client

Run **PC Client.exe** on PC client computer.


Mac Client


Run **ElecRoc6090 .pkg** on Mac Client computer, follow the next steps.

a. Click **Continue** in the next windows.

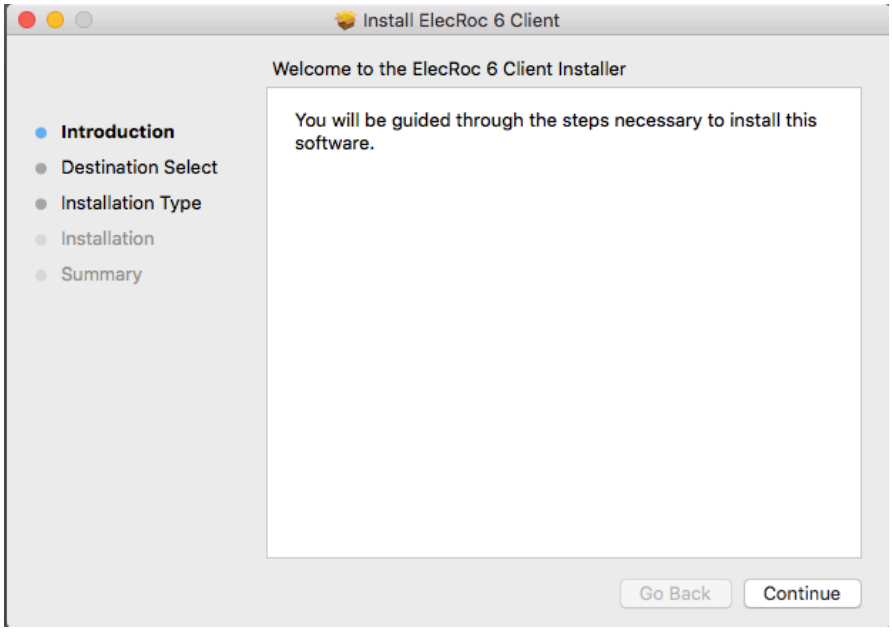

b. Select the disk where you want to install the ElecRoc6 client software, and then click **Choose Folder...** button to select a destination.

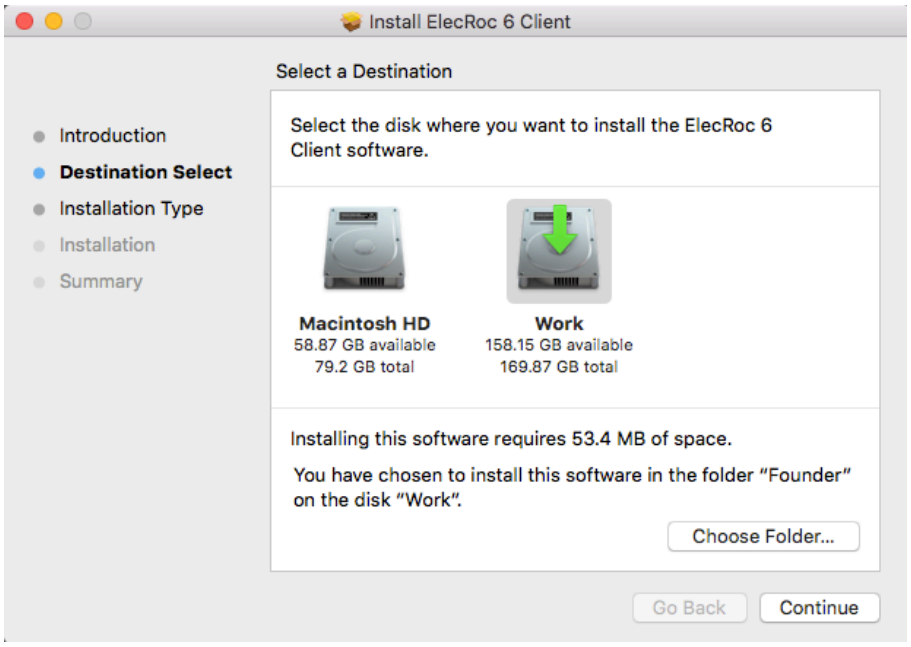

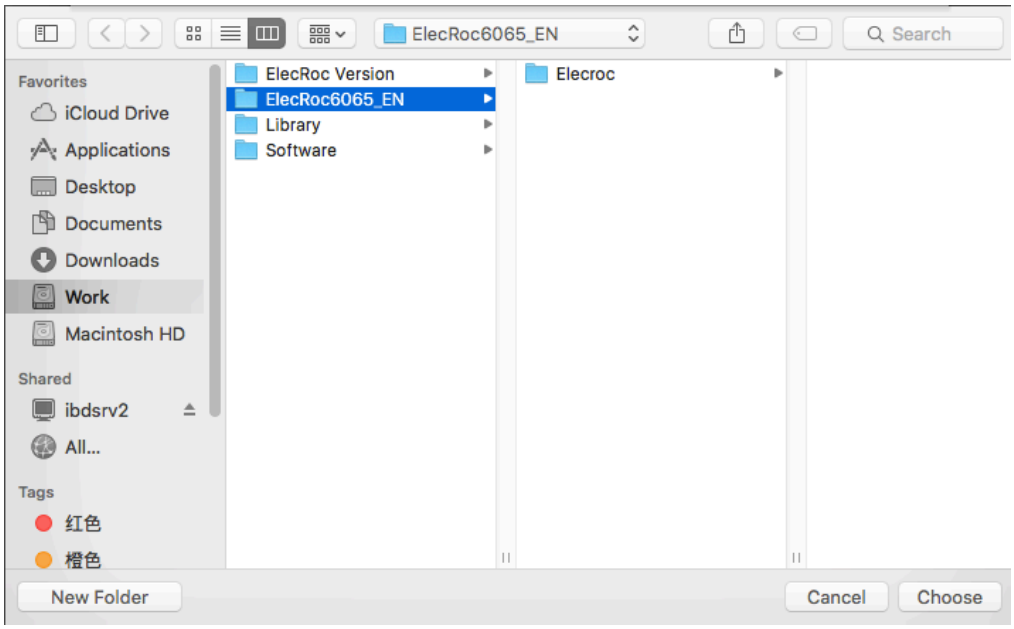

c. Click **Install** button to finish the upgrade.

